

FROM THERMOSTATIC TO MECHANICAL AND VICE VERSA

CARIMALI external mixers are the **ONLY** ones that can be converted from thermostatic to mechanical (and vice versa) by simply changing the cartridge.

EASY and QUICK
procedure of a few
simple steps


Thanks to simple kits complete with every-
thing you need:

Cartridge


New handle

Adapter


Installation tools

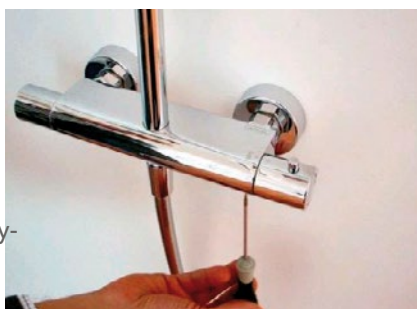

1.
Unscrew the grains on the
temperature control handle

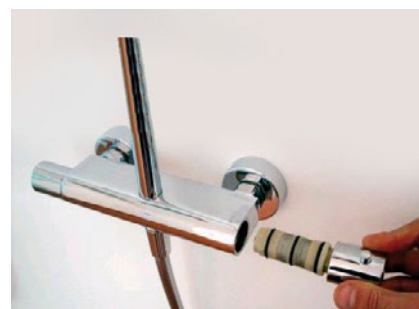

2.
Remove existing cartridge and
temperature control handle

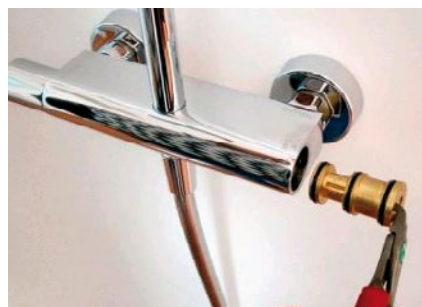

3.
Insert the adapter



4.
Insert the new cartridge



5.
Insert the new handle

AVAILABLE KITS

ART	ITEM DESCRIPTION Article description	FOR ITEMS For articles
ORIC036	Thermostatic to mixer conversion kit	Rigoletto 21500-CR
ORIC038	Mixer to thermostatic conversion kit	Rigoletto 21510-CR
ORIC061	Thermostatic to mixer conversion kit	Rigoletto (brass knobs) 21505-CR
ORIC062	Mixer to thermostatic conversion kit	Rigoletto (brass knobs) 21515-CR
ORIC055	Thermostatic to mixer conversion kit	Rigoletto Colonial 21522-CR
ORIC056	Mixer to thermostatic conversion kit	Rigoletto Colonial 21532-CR
ORIC039	Thermostatic to mixer conversion kit	Così 21400-CR
ORIC040	Mixer to thermostatic conversion kit	Così 21410-CR
ORIC057	Thermostatic to mixer conversion kit	Extreme 21550-CR
ORIC058	Mixer to thermostatic conversion kit	Extreme 21560-CR